



Imágenes ilustrativas


User Manual

Mueble de Guarda y Carga

Model: CHARGE 30M 01

Thank you for choosing our products! The charging cabinet is designed to charge and store devices with protection. This technical manual must be regarded as part of the product, please review this manual before installing your equipment for safely using the cart.

FEATURES MAIN STRUCTURE

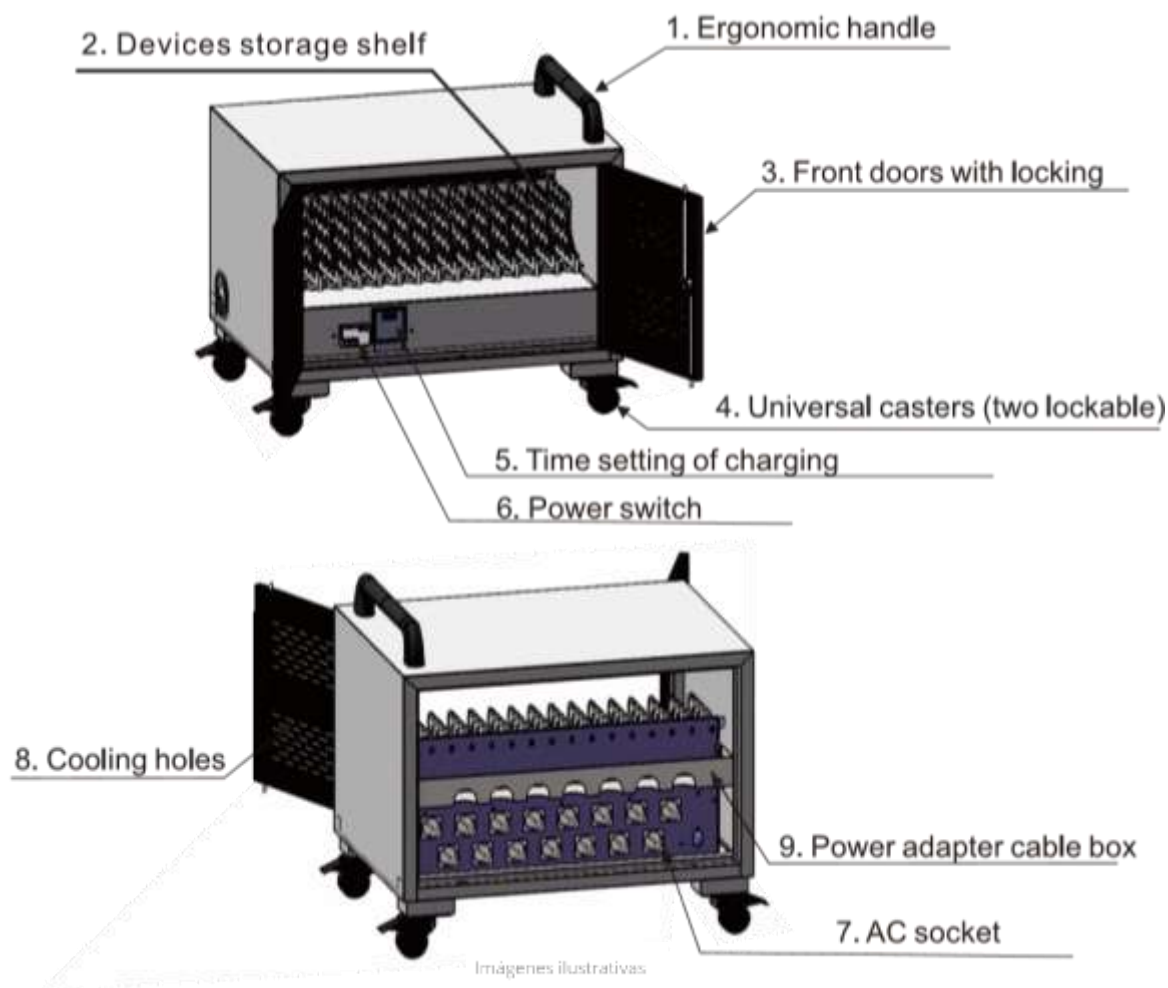

How do I know whether or not my devices will draw more than the allowed current?

Have a qualified electrician verify the units current draw. Perform this test with device installed and batteries discharged.

The cart cannot move?

Check the universal casters on bottom, make sure the locking is OFF.

Is my power cable damaged, and is it covered under the warranty?

The cables are not covered under warranty. If you need extra power cable, kindly contact us directly or our re-sellers.

WARRANTY

1. Limitations of Warranty.

We make no warranties to any third party.

2. Disclaimer of Warranty

Except as expressly provided otherwise herein and to the maximum extent permitted by applicable law, we disclaim all other warranties with respect to the product, whether express, implied, statutory or otherwise, including without limitation, satisfactory quality, course of dealing, trade usage or practice or the implied warranties of merchant ability, fitness for a particular purpose or non-infringement of third-party rights.

3. Limitation of Liability.

damages. Our total, aggregate liability for damages of any nature, regardless of form of action, shall in no event exceed the amount paid by you to us for the specific product upon which liability is based.

5. Load your devices into the cabinet and connect them to the charging cables (if charging is required), then turn on the power switch

6. Position the cabinet near a wall outlet and plug it in, and make sure the emergency is switched off.

7. The emergency button is backup for the failure of time-setting function, turn on the emergency button, the cart will connect the power directly.

CLEANING AND MAINTENANCE

1. Keep the devices dry. Avoid to exposure to rain, moisture any liquid or minerals could corrode surface and circuit.
2. Avoid using the devices in dusty, dirty places, electronic components of movable parts box might be damaged
3. Do not store the devices in high temperatures. High temperatures may influence the life of electronic devices
4. Do not store the devices in low temperatures, it may produce moisture to damage circuit when back to the normal temperature.

5. Rough force may damage the internal circuit boards and other precision construction.
6. Avoid using harsh chemicals, cleaning solvents or abrasive cleaners to clean the device.
7. Use it on the stable platform to prevent the dumping equipment to prevent accidents.
8. Unplug to save the power and avoid surges.
9. Overload the outlets or expand the power cord may cause fire or electric shock.
10. Do not allow any outside objects falling inside the device while installation and use.
11. The power cord is main and direct power equipment.
12. Please use the soft, clean, dry cloth to clean equipment.
13. Please use the standard or licensed accessories. Unauthorized accessories especially electronic components could damage the equipment circuit.
14. Please contact our service provider to solve equipment failure.

TROUBLESHOOTING GUIDE

The devices are all plugged in, but won't charge?

First, Check the cart, make sure it connected well with the power cable.

Next, check the safety switch is ON. Then, refer the additional instructions if your cart equipped optional function.

SAFETY NOTICE

These carts and accessories are electrical devices. Use carefully with them and follow these important safeguards:

- Product is for indoor use only.
- Never touch the cooling fan while running.
- The charging cart must always be used by adults or with adult supervision.
- Always secure the doors before moving the cabinet
- Liquid should not be stored in, placed inside this unit.
- Never unplug this product from the outlet when your hands are wet.
- Ensure casters are locked before opening cart doors.
- Do not plug the power cord into another extension cord or re-locative power tap.
- Inadequate repair can create significant hazards to users and is not covered by the warranty.
- Repairs should always be performed by a qualified electrician.
- Always latch doors before moving the cart.
- Do not use power cord to pull the cart or roll the cart over the power cord.
- Never plug in the cart if the switch, receptacles, or power cord are broken, cracked, torn or inadequately repaired.

We do not accept any liability for damage if the unit is misused, incorrectly operated or inadequately repaired. Under these circumstances the warranty will be void.

SET-UP YOUR DEVICE SELECTRICAL TESTING

- Before using your new charging cart, have a qualified electrician to verify the current draw does not exceed the rating of the unit when all the devices are installed.
- Test the contact integrity of the wall outlet using a receptacle tension tester.
- Test the branch circuit for ground integrity and branch circuit protection.
- Do not plug in the unit if the switch, receptacles, or power cord have been damaged or if the ground prong is missing from the plug.

DEVICE STORAGE & CABLE MANAGEMENT

1. Remove the back panel from the cabinet to allow access to the AC sockets
2. Starting from the back IT area of the cabinet, connect the charging cables for individual devices to the AC sockets
3. Pass the charging cables through holes in the back panel and route them to the front of the cabinet
4. Repeat the above process for connecting all required charging cables